

décor®



Decor and Microsafe are registered trade marks and Thermoglass and Realseal are trade marks of The Decor Corporation Pty. Ltd.

Decor Thermoglass™ products are designed in Australia and made in China to Decor specifications.

Des Reg. © 2009 Pat. App.

ABN 88 004 231 109

The Decor Corporation Pty Ltd
1314 Ferntree Gully Road
Scoresby Victoria 3179 Australia

Simple and delicious recipes

See our website for a variety of recipes created by Beverley Sutherland Smith.

www.decor.com.au



really **AIRTIGHT**
really **LEAKPROOF**
really **NICE TO USE**

décor thermoglass™ oven safe

NEW

realseal™



strong tempered glass dish
with **Microsafe**® **Realseal**™ lid

Usage and safety guidelines

Please read and follow these usage and safety guidelines in order to maximise the life of your Thermoglass™ dish and Microsafe® Realseal™ lid and maintain validity of your warranty.

Thermoglass™ oven-safe dish

Before use, wash your Decor Thermoglass™ dish by hand or in the dishwasher.

Please do not use your Thermoglass™ dish if it has been damaged in any way, including chips, cracks or scratches. The dish could fragment and cause serious injury if used when damaged.



Oven use

The Thermoglass™ dish can be used in conventional and microwave ovens. Do not use in a toaster oven, on a cooktop, under a griller, browner or on any open flame.

Do not use your Thermoglass™ dish to hold convenience foods in special browning wrappers. Do not use for popping corn.

Always handle a hot Thermoglass™ dish with dry potholders or Decor oven mitts with silicone grips.

Temperature changes

Avoid sudden and severe temperature changes.

Prior to cooking foods that release liquids while baking, add a small amount of liquid to the Thermoglass™ dish. Do not add liquid to a hot Thermoglass™ dish.

Do not place a hot Thermoglass™ dish on cold or wet surfaces – use a Decor silicone trivet or heat mat.

Cleaning

Allow the Thermoglass™ dish to cool before rinsing or washing.

Thermoglass™ dishes are dishwasher safe – do not scrub with harsh or abrasive scourers or cleaners.

Realseal™ lids are dishwasher safe – the silicone seal and steam/air release button on the lid can be easily removed for cleaning when required.

Microsafe® Realseal™ lid

The Decor Microsafe® Realseal™ lid is for use with the Thermoglass™ glass dish in the microwave, refrigerator and freezer only. Do not use the Microsafe® Realseal™ lid in a conventional oven, toaster oven, under a griller or on a cooktop.

After oven cooking, ensure that the Thermoglass™ dish cools before covering with the Microsafe® Realseal™ lid.

Microwaving foods high in sugar, fat, tomatoes or curries may mark or stain the silicone seal, but will not affect its usability.

3-Year Limited Warranty – Thermoglass™ dish

We will replace this Thermoglass™ dish if it breaks due to oven heat within three years of the date of purchase, provided it is used for the purpose for which it is designed and these usage and safety guidelines are followed.

Limited Lifetime Quality Warranty – Microsafe® Realseal™ lid

We will replace the Microsafe® Realseal™ lid if it shows a manufacturing defect, provided it is used for the purpose for which it is designed and these usage and safety guidelines are followed.

Limited Warranty Conditions

Please retain proof of purchase and, if you are seeking replacement, keep the product as we may ask you to return it. A product will not be replaced if damage is a result of normal wear and tear. Incidental and consequential damages are excluded from the above warranties. If you would like more information, you can contact us through our website www.decor.com.au

Decor Microsafe® Realseal™ lids

The Microsafe® Realseal™ lids allow use of the Thermoglass™ dishes in the microwave for cooking and quick reheating (note the lids are not to be used in conventional or toaster ovens).

The lids also enable meals prepared in the Thermoglass™ dishes to be stored in the fridge and freezer. Before refrigerating or freezing, let the dish cool.

The Microsafe® Realseal™ lid is airtight and leak-proof. To remove the lid easily, click open the steam/air release vent.

The seal is not affected by microwave heating or freezing.



 No BPA
No anti-bacterial
chemicals added

Steam/air release vent

Before microwaving, put the Microsafe® Realseal™ lid on the Thermoglass™ dish and click the vent open to release steam during cooking.

After removing the dish from the microwave, leave the vent open while the food is very hot to allow it to rest. For storage in the fridge and freezer, let the food cool then close the vent.

Some vegetables store better and stay crisper with air circulation. Before storing in the refrigerator, click open the steam/air release vent on the Microsafe® Realseal™ lid.

For a really airtight seal, close the vent immediately after placing the lid on the container.

To remove the lid easily, first click open the steam/air release vent.



Decor Thermoglass™ dishes

Thermoglass™ tempered glass dishes are specially designed for use in conventional and microwave ovens to cook, serve, store and reheat your meals.

A variety of useful sizes are available for cooking or storage.

They come with a range of features:

- Thermoglass™ is premium heat-resistant borosilicate glass that is tempered to make it strong and oven safe.
- Generous finger grips at both ends allow safe, easy handling.
- Thermoglass™ won't absorb flavours or stains.

Here's a handy tip: the 500 ml Thermoglass™ dish with Microsafe® Realseal™ lid is ideal for taking lunches to work for microwave reheating.

Decor silicone trivet and heat mat (available separately)

Always use a Decor silicone trivet or heat mat for resting hot Thermoglass™ dishes on the bench or table to prevent damage.

Very important: Before use, please read the usage and safety guidelines (see over).

décor accessories



thermoglass™

OVEN MITTS WITH SILICONE GRIPS

SILICONE HEAT MAT/DRAINING MAT

SILICONE TRIVET

AVAILABLE SEPARATELY