



Décor Realseal™ glass storer

Your Décor Thermoglass® dish with Realseal™ lid is specially designed for safe food storage in the pantry, fridge and freezer. A variety of useful sizes are available.

The dish with the lid on can also be used in the microwave for quick cooking and reheating.

On its own, the dish (without the lid) can be used for cooking and reheating in a conventional oven.

Here's a handy tip: the 600 ml glass storer is ideal for taking lunches to work for reheating in the microwave.

Décor Thermoglass® dish

Décor Thermoglass® is strong, premium-quality borosilicate glass that is food safe, microwave safe and oven safe. It won't stain or absorb flavours.



Realseal™ lid

The Realseal™ lid has a soft silicone seal and steam/air release vent that make it airtight and leakproof.

For a really airtight, leakproof seal, press firmly near the centre of the lid (you can hear the air escape) and click the vent closed. To remove the lid easily, first click open the vent.

The lid allows use of the Décor Thermoglass® dish in the microwave for quick cooking and reheating.

When microwaving with the lid on the dish, click the vent open to allow steam to be released during cooking.

After removing the dish from the microwave, leave the vent open while the food is very hot to allow it to rest. If storing in the fridge or freezer, let the food cool then close the vent.

The seal in the lid is not affected by microwave heating or freezing.



Usage and safety guidelines

Please read and follow these usage and safety guidelines in order to maximise the life of your Décor Thermoglass® dish and Realseal™ lid.

Décor Thermoglass® dish

Glass is breakable and must be handled with care.

Breaking may occur from:

- Impact – if the dish is dropped or knocked against a hard object
- Using a Décor Thermoglass® dish that is damaged, including chips, cracks or scratches
- Sudden and severe temperature changes applied to a Décor Thermoglass® dish.

If used for cooking, the primary risks associated with Décor Thermoglass® are:

- Personal injury or property damage from breaking of the dish
- Burning when handling a hot dish.

Failure to heed these warnings or follow the instructions in this leaflet may cause you or someone in your kitchen to be seriously injured, or may cause your Décor Thermoglass® dish to break immediately or later.

Do not use any Décor Thermoglass® dish that is chipped, cracked or severely scratched.



Do not strike utensils against the rim of the dish to dislodge food, or use knives to cut food in the dish.

Be careful when handling broken glass.

Broken glass pieces may be extremely sharp and difficult to locate; wear gloves and shoes when cleaning up broken glass.

Temperature changes

Do not allow a Décor Thermoglass® dish to be subjected to sudden or severe temperature changes.

Always allow a hot dish to cool before refrigerating, freezing, washing or rinsing (including in a dishwasher).

Do not put a dish directly from the fridge or freezer into a microwave or oven. Allow to thaw and come to room temperature.

Before putting a dish in a conventional oven for cooking or reheating, always preheat the oven to the desired temperature.

Prior to cooking foods that release liquids when baking, add a small amount of liquid to the dish (whether in a microwave or conventional oven). Do not add liquid to a hot dish.



Do not place a hot Décor Thermoglass® dish on a cold or wet surface – use a Décor silicone trivet or heat mat.

Oven use

The Décor Thermoglass® dish can be used in microwave ovens (with lid) and conventional ovens (without lid). Do not use in a toaster oven, on a cooktop, under a griller or browner, or on any open fire.

Do not use the dish to heat convenience foods in special browning wrappers. Do not use it for popping corn.

Do not overheat oil or butter in the microwave – use minimum cooking time.

Do not heat an empty or nearly empty dish in the microwave.

Always handle a hot Décor Thermoglass® dish with dry potholders or Décor oven mitts. Do not handle a hot dish with a wet towel, wet potholder or other wet cloth.

Realseal™ lid

The Realseal™ lid is for use with the Décor Thermoglass® dish in the pantry, fridge, freezer and microwave.

Do not use the lid in a conventional oven, toaster oven, under a griller or on a cooktop.

If using the Décor Thermoglass® dish for cooking or reheating in a conventional oven, make sure the dish cools before covering with the lid.

Microwaving foods high in sugar, fat, tomatoes or curries may mark or stain the silicone seal but will not affect its useability.



Cleaning

Before use, remove the labels from the Décor Thermoglass® dish and Realseal™ lid then wash by hand or in the dishwasher (both are dishwasher safe).

Do not scrub the dish or lid with harsh or abrasive scourers or cleaners.

The silicone seal and steam/air release vent on the lid can be easily removed for cleaning when required.

Important: Food Safety

Décor Thermoglass® dishes and Realseal™ lids are free of BPA, PVC, lead and phthalates, so they're perfectly safe for using with food.

Décor oven mitts, silicone trivet and heat mat (available separately)

Décor oven mitts are available for handling hot Décor Thermoglass® dishes. The Décor silicone trivet and heat mat are available for resting hot dishes on the bench or table to prevent damage.



VERY IMPORTANT:
Before using your Décor Thermoglass® dish and Realseal™ lid, please read the usage and safety guidelines.

décor

Décor and Décor Thermoglass are registered trade marks and Thermoglass and Realseal are trade marks of The Décor Corporation Pty. Ltd. Décor Thermoglass® products are designed in Australia and made in China under Décor supervision.
Des. Reg. Pat. App. © 2012
ABN 88 004 231 109
The Décor Corporation Pty. Ltd. 1314 Ferntree Gully Road Scoresby Victoria 3179 Australia

