



# match-ups™ clips

## care and usage guide general storers

- Find the right lid everytime with the simple lid to base colour match system
- Leak resistant lid seal
- Modular and stacking design to maximize even the smallest storage space
- For microwave use rotate clips fully open to release lid
- Fridge, freezer, microwave & dishwasher safe (top shelf only)



Please read and follow these usage and safety guidelines to maximise the life of your Decor product



### TO USE MATCH-UPS™ CLIPS IN A MICROWAVE:

Place lid on the storer base loosely so that steam can escape around the lid.

### AFTER FREEZING:

Let the plastic storer rest for a few minutes or run water over it before removing the lid as freezing makes the lid stiff and difficult to remove.

### TO REMOVE LID:

Open clips and rotate clips fully open to release the lid seal away from the base.

### CARE GUIDELINES:

Before use, remove labels and wash the product. Do not use abrasive materials when washing; applying a paste of baking soda and water then rinsing thoroughly can reduce food stains and discolouration.

### WARNINGS:

- After microwaving, contents and storer may be very hot.
- Always use oven mitts to prevent risk of burn injury.



food safe



microwave safe



microwave reheat




dishwasher safe



top shelf in dishwasher



freezer safe

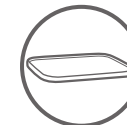

scratch resistant lid



stackable

### DO NOT USE DECOR MATCH-UPS™ PRODUCTS:

- In conventional ovens or toaster ovens
- In combination microwave ovens (unless in microwave only mode)
- On hot plates, stove tops or under a grill

Overheating foods, particularly foods high in oil, fat or sugar, may cause the product to melt. If the product melts, it may cause a burn injury if handled. Microwave reheat only. Decor recommends checking food every 30 seconds during microwaving.

Never cook popcorn in Match-ups™ products as doing so may melt the product.