



CARE AND USAGE GUIDE

- Perfect for storing, microwave reheating and quick cooking
- Leak-proof & airtight seal keeps food fresher for longer
- Easy-open steam release vent for microwaving
- Fridge, freezer, microwave reheat & dishwasher safe (top shelf only)
- Easy grab safe hold handles

TO REHEAT AND COOK QUICK

Place lid on the base and click the steam release vent to the open position. After removing from microwave, leave vent open while food is hot. Close vent for storage after cooling.

AFTER FREEZING

Let the storer rest for a few minutes or run water over it before removing the lid, as freezing makes the lid stiff and difficult to remove.

TO STEAM

If steaming, add water to the base and monitor water level during steaming, topping up with water as required.

CARE GUIDELINES

Before use, remove labels and wash the product. Do not use abrasive materials when washing. Applying a paste of baking soda and water then rinsing thoroughly can reduce food stains and discolouration. Steam vents can be removed for easy cleaning.

WARNINGS

- After microwaving, contents and storer may be very hot.
- Always use oven mitts to prevent risk of burn injury



DO NOT USE DECOR DELISH™ PRODUCTS

- In conventional ovens or toaster ovens
- In combination microwave ovens (unless in microwave only mode)
- On hot plates, stove tops or under a grill
- Overheating foods, particularly foods high in oil, fat or sugar, may cause the product to melt. If the product melts, it may cause a burn injury if handled.

If cooking with oil, or if cooking foods high in oil, fat or sugar, Decor recommends checking food regularly during microwaving, e.g. every 30 seconds. If melting fat, do not microwave past the point of melting.

Never cook popcorn in Décor Delish™ products, as doing so may melt the product.