

## CARE AND USAGE GUIDE

- Microwave reheat, freezer and dishwasher safe (top rack only).
- Oven safe (remove lid before oven use).
- Before use, remove labels and wash the product. Seal is removable for easy cleaning, hand wash only.
- To use in the microwave, unclip and remove lid. Loosely rest lid diagonally on base to allow air to vent from corners.
- After removing from microwave, leave lid off while food is hot, allow to cool before covering with lid.
- To use in the oven, remove lid entirely.
- After removing glass storer from oven, allow to cool before covering with lid.
- Glass storers are breakable and must be handled with care to avoid personal injury or property damage.
- Cease use if glass is chipped, cracked or has significant scratches.



### TO USE DELUXE CLIPS™ IN A MICROWAVE:

Place lid on the storer base loosely so that steam can escape around the lid.

### TO REMOVE LID:

Open clips and rotate clips fully open to release the lid seal away from the base.

### AFTER FREEZING:

Let the glass storer rest for a few minutes. Must avoid extreme temperatures as it is glass. Warm water over the top of the glass storer may crack the glass base.

### CARE GUIDELINES:

Before use, remove labels and wash the product. Do not use abrasive materials when washing. Applying a paste of baking soda and water then rinsing thoroughly can reduce food stains and discolouration.



### WARNINGS:

- Avoid sudden or severe temperature changes.
- Do not use lid in a conventional oven or in a combination microwave oven on any setting other than microwave.
- Do not heat an empty or nearly empty storer in the microwave.
- Not suitable for cooking popcorn or for use with special browning papers.
- If melting fat, do not microwave past the point of melting.
- Use minimum cooking time and monitor regularly.
- After microwaving or oven cooking, contents and glass storer may be very hot.
- Use oven mitts to prevent risk of burn injury.
- Do not handle glass storer with anything wet.
- Do not place a hot glass storer on a cold or wet surface, we recommend using a heat mat.
- Do not add cool or room temperature liquid to a hot glass storer.
- After freezing, let the glass storer rest for a few minutes before removing the lid and thaw to room temperature before using in microwave or oven.
- Do not use on hotplates, stovetop, in a toaster oven, under a grill or over flames.
- Do not nest glass storer whilst hot from the dishwasher.