

décor




Fresh Seal CLIPS

CARE AND USAGE GUIDE

- Stylish design featuring a seamless single colour
- Modular and stacking design to maximise even the smallest storage space
- Leak resistant seal lid
- Microwave reheat only. For microwave use, rotate clips fully open to release lid
- Fridge, freezer, microwave and dishwasher safe (top shelf only)



To seal

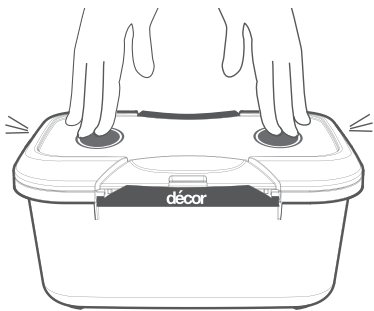

Press lid firmly where indicated to expel air.

TO USE FRESH SEAL CLIPS IN A MICROWAVE:

Place lid on the storer base loosely so that steam can escape around the lid.

AFTER FREEZING:

Let the plastic storer rest for a few minutes or run water over it before removing the lid as freezing makes the lid stiff and difficult to remove.

TO REMOVE LID:

Open clips and rotate clips fully open to release the lid seal away from the base.

CARE GUIDELINES:

Before use, remove labels and wash the product. Do not use abrasive materials when washing. Applying a paste of baking soda and water then rinsing thoroughly can reduce food stains and discolouration.

WARNINGS:

- After microwaving, contents and storer may be very hot.
- Always use oven mitts to prevent risk of burn injury.

DO NOT USE DECOR FRESH SEAL CLIPS PRODUCTS:

- In conventional ovens or toaster ovens.
- In combination microwave ovens (unless in microwave only mode).
- On hot plates, stove tops or under a grill.

CAUTION

- Microwave reheat only. Overheating foods, particularly foods high in oil, fat or sugar, may cause the product to melt. If the product melts, it may cause a burn injury if handled. Decor recommends checking food every 30 seconds during microwaving.
- Never cook popcorn in Fresh Seal Clips products as doing so may melt the product.

