

CARE AND USAGE GUIDE

- Microwave reheat, freezer and dishwasher safe (top rack only).
- Oven safe (remove lid before oven use).
- Before use, remove labels and wash the product. Seal is removable for easy cleaning, hand wash only.
- To use in the microwave, unclip and remove lid. Loosely rest lid diagonally on base to allow air to vent from corners.
- After removing from microwave, leave lid off while food is hot, allow to cool before covering with lid.
- To use in the oven, remove lid entirely.
- After removing glass storer from oven, allow to cool before covering with lid.
- Glass storers are breakable and must be handled with care to avoid personal injury or property damage.
- Cease use if glass is chipped, cracked or has significant scratches.



TO USE VENT&SEAL™ IN A MICROWAVE:

TO ENSURE SEAL



TO REMOVE LID OPEN VENT

Place lid on the storer base and click the steam release vent to the open position. Microwave. After removing from microwave, leave vent open while food is hot. Close vent for storage after cooling. To remove lid click vent open.

TO REMOVE LID:

Let the glass storer rest for a few minutes. Must avoid extreme temperatures as it is glass. Warm water over the top of the glass storer may crack the glass base.

AFTER FREEZING:

Let the glass storer rest for a few minutes. Must avoid extreme over the top of the glass storer may crack the glass base.

CARE GUIDELINES:

Before use, remove labels and wash the product. Do not use abrasive materials when washing. Applying a paste of baking soda and water then rinsing thoroughly can reduce food stains and discolouration.



WARNINGS:

- Avoid sudden or severe temperature changes.
- Do not use lid in a conventional oven or in a combination microwave oven on any setting other than microwave.
- Do not heat an empty or nearly empty storer in the microwave.
- Not suitable for cooking popcorn or for use with special browning papers.
- If melting fat, do not microwave past the point of melting.
- Use minimum cooking time and monitor regularly.
- After microwaving or oven cooking, contents and glass storer may be very hot.
- Use oven mitts to prevent risk of burn injury.
- Do not handle glass storer with anything wet.
- Do not place a hot glass storer on a cold or wet surface, we recommend using a heat mat.
- Do not add cool or room temperature liquid to a hot glass storer.
- After freezing, let the glass storer rest for a few minutes before removing the lid and thaw to room temperature before using in microwave or oven.
- Do not use on hotplates, stovetop, in a toaster oven, under a grill or over flames.
- Do not nest glass storer whilst hot from the dishwasher.